



SOFTWARE MANUAL/MANUEL DU LOGICIEL



## EN CONFIGURATION AND CONTROL SOFTWARE

The matrix **MPX-4088** is configured using PC software. In order to download the software, access our **MPX-4088**. Then, open the "Software" tab to download the

file in your computer and install the software. This software is compatible with Windows 7 or higher. The software has two connection modes for the configuration of the matrix.



1.- Daisy chain network mode: allows configuration of the matrix MPX-4088, as well as the optional models MPX-400MIC, MPX-410ES, MPX-420V and MPX-430VS. In this edition mode, the PC and the matrix MPX-4088 must be connected directly by RJ-45 cable and the LAN/RC-Net selector located on the rear panel of the matrix, must be in the LAN position.



- It is necessary to establish the IP address of the matrix. To do so, click on the SETUP button and, then, on SCAN to begin the automatic search for the IP and MAC address of the **MPX-4088** matrix.

Der	vice Scan below	MAC
	192.168.1.244	00-A1-80-00-0B-4B
St	ate:	
	p: 192.168.1.244 pc	ort: 5000
	AC	AC IP IP I92.168.1.244 State: IP: 192.168.1.244 Pc

Select the line with the IP and MAC address of the **MPX-4088** matrix and click on APPLY. Then, click on CONNECT and the STATUS indicator should turn green. Add the devices located in the sidebar by dragging them into the grey area.

MPX-4088 v1.0.6					
System About		Connect Setup	Status:		
ConfigDeviceList     MPX-4008     MPX-41009     MPX-41009     MPX-4100     MPX-400Mid     MPX-400Mid	1 		Device D-1000		

Double click on the required device module to access the edition mode.

**Note:** when several matrices are connected in cascade, the LAN/RC-Net connector must be in the LAN position on the matrix that is directly connected to the PC, and in the RC-Net position on the rest of the matrices that are connected to each other. To access the configuration of each device, it is necessary to establish the device's ID manually by right-clicking on the device to be configured and accessing "Change Device ID".



2.- Star network mode: allows the configuration and individual control of several MPX-4088 matrices connected to the same router. In this edition mode, the PC and the MPX-4088 matrix must be connected to the router with RJ-45 cable and the LAN/RC-Net selector located on the rear panel of the matrix must be in the LAN position.

In this edition mode, the system automatically detects the **MPX-4088** matrices connected to the network for their configuration and control.



#### **MPX-4088**

The edition mode of the **MPX-4088** allows real-time editing of input/output signal processing parameters, allocation of sources to zones, attenuation of signal level inputs, feedback cancellation, auto-mix, presets to be saved and loaded, relays to be activated/deactivated, the device name to be changed and factory values to be restored. By default, the **Input DSP Channel** tab is displayed.

#### **INPUT DSP CHANNEL**



#### 1.- EXP/GATE MODULE:

Add dynamic to the signal for each input channel. When the input signal is below the threshold, the expander amplifies it with the ratio value adjusted. If the signal is above the threshold, the output remains identical. By adjusting the ratio value to the maximum (Limit), the expander becomes a noise gate.

- a.- Graphic display of **EXP/GATE** module.
- b.- Release: expander release time when the signal goes above the threshold.
- c.- Ratio: amplification ratio between input signal and amplified signal.
- d.- **Threshold:** threshold value, the signal below this value will be amplified according to the selected amplification ratio.
- e.- **Attack:** expander reaction time when the input signal is below the threshold value.
- f.- **Bypass:** the input signal is not processed and is diverted to the next processing module.
- g.- Default: resets the default values of the EXP/GATE module.



# 2.- PHANTOM POWER SUPPLY MODULE

- a.- DC 48 V: allows the phantom power supply of each input channel to be activated/deactivated.
- b.- Microphone Sensitivity: allows the microphone sensitivity to be adjusted.
- c.- Polarity: allows the input signal phase to be inverted 180°.

#### 3.- INPUT/OUTPUT CHANNELS

- a.- Input/output channel selector CH1 CH12).
- b.- Mute: silences the corresponding input/output channel.
- c.- Signal level digital fader (-80 a +15dBu).
- d.- LED indicator of input/output channel signal level.
- e.- Displays the gain value applied to the input/output channel.

#### 4.- DELAY MODULE

- a.- **Delay:** delay applied to the signal from the corresponding input/output channel, in ms.
- b.- Bypass: the input signal is not processed and is diverted to the next processing module.

#### 5.- EQUALIZATION MODULE

High and low pass filters to eliminate frequencies above or below the established cutoff frequency.

- a.- Freq.: cutoff frequency.
- b.- **Type:** type of filter applied: Bessel, Linkwitz or Butterworth.

5-band parametric equalization. Allows the input signal spectrum to be modified graphically or by entering the required values manually.

- c.- Frequency: central frequency.
- d.- **Qfact:** filter quality factor. The greater the value, the smaller the range of frequencies that are affected.
- e.- Flat: all the equalization parameters are restored to their original value.
- f.- Bypass: the input signal is not processed and is diverted to the next processing module.
- g.- Gain: gain elevation or attenuation in the established central frequency.
- h.- Type: type of filter; peak, low pass or high pass.
- i.- Bypass 1~5: allows the processing of filters 1 to 5 to be cancelled without using the general bypass.

#### 6.- COMPRESSION MODULE

Limits the dynamic of the signal for each input channel. When the signal exceeds the threshold, it is compressed in a ratio greater than 1. Below the threshold, the compressor does not modify the signal. By adjusting the ratio to its maximum value (Limit), the compressor becomes a limiter.

- a.- Graphic view of the Compressor module.
- b.- **Threshold:** threshold value, above this value the signal will be compressed according to the selected compression ratio.
- c.- Attack: compressor reaction time when the input signal is above the threshold level.
- d.- Ratio: compression ratio between the input signal and the compressed signal.
- e.- **Release:** release time of the compressor when the signal is above the threshold value.
- f.- Flat Comp: sets the Compressor module default values.
- g.- Bypass: the input signal is not processed and is diverted to the next processing module.





e







F MPX-4088 Editor						-		×
App ID: 06 DeviceID: 1000 Status:					Firm	ware Version v0.0	8	-
Input DSP Channel Matrix	Output DSP Channel	DUCKER	FBC	AutoMixer	Save/Load/Copy	System		
Input of count of the second o					Net 07			

With the MATRIX function, the inputs are allocated to the outputs. By clicking on the grey rectangles, they turn green, indicating the correct allocation of the input channel to the chosen output.

IN/OUT 1~8: correspond to the analogue audio inputs/outputs available on the rear panel.

IN/OUT 9~12: correspond to the digital audio inputs/outputs (RD ports) for models **MPX-400MIC**, **MPX-410ES** and **MPX-430VS**, available on the rear panel.

IN/OUT NET 1~8: correspond to the broadcast inputs/outputs.

#### **OUTPUT DSP CHANNEL**

The same menu as the DSP Input Channel but without the expander module and phantom power supply. The parametric equalization is 8-band instead of 5.

#### DUCKER



The DUCKER function allows one or several channels to be attenuated depending on the signal level of the channels with priority.

#### Source Select

1.- Local Input: selection of input channels with priority.

#### **BGM Setting**

- 2.- Local input: selection of input channels to be attenuated.
- 3.- **Network Input:** selection of broadcast inputs to be attenuated.

#### **Ducking Controller**

- 4.- Threshold: attenuation threshold.
- 5.- **Depth:** attenuation depth.
- 6.- Attack: reaction time to attenuate the selected channels.
- 7.- Release: release time of the selected channels.
- 8.- Default: resets the default values.
- 9.- Bypass: the input signal is not processed and is diverted to the next processing module.

#### FEEDBACK CANCELLER FBC



The Feedback Canceller function automatically eliminates the feedback produced by microphones to nearby loudspeakers.

#### **FBC Input Select**

- 1.- Local Input: selection of input channels to be processed.
- 2.- Network input: selection of broadcast input channels to be processed.

#### **FBC Setting**

- 3.- Filter Release: dynamic filter release time after processing the signal.
- 4.- **FBC Mode:** application mode, for music or for speech.

#### **FBC Setup**

- 5.- Static Filters Setup: volume configuration to achieve feedback.
- 6.- FBC filters: 24 feedback cancellation filters.
- 7.- Clear Dynamic Filters: restarts dynamic filters.
- 8.- Clear All Filters: restarts all filters, static and dynamic.
- 9.- Bypass: the input signal is not processed and is diverted to the next processing module.

#### **FBC Output Assign**

- 10.- Local Output: output channels corresponding to the inputs selected for processing.
- 11.- Network output: cbroadcast output channels corresponding to the inputs to be processed.

The configuration of the FBC is manual. It consists in finding the resonance frequencies to be eliminated. Once the frequencies have been found, the system will automatically decide on the suitable filters.

In order to configure the FBC, the microphones must be connected and open. The FBC (4) fader must be moved until feedback is reached. When the system detects feedback, the indicators 1 to 24 turn red for static filters and green for dynamic filters.

# ES AUTOMIXER

	App ID: 06 DeviceID: 1000	Status:		_	_	_	Fi	irmware Version v0.0	
	Input DSP Channel	Matrix	Output DSP Channel	DUCKER	FBC	AutoMixer	Save/Load/Copy	System	
1	Source Select Local Input 2 3	4 5	6 7 8 1	9 10 11 1	2				
2	Active Time								
3									

The AutoMixer function reduces the level of a microphone when it is not being used, ideal for conference rooms, theatres, etc.

This function can be combined with the Ducker function, by doing so also establishing priority.

1.- Local input: selection of input channels to be processed.

#### Active Time

- 2.- **ON/OFF:** activates/deactivates the attenuation time.
- 3.- Sets the attenuation time.

#### SAVE/LOAD



From the SAVE/LOAD tab, configurations can be saved and loaded as presets. This data can be saved in the internal memory of the matrix, as well as in the PC. The memory of the **MPX-4088** matrix has a capacity for a total of 16 presets.

- 1.- Import All Presets: imports the presets from the MPX-4088 matrix to a file in the PC.
- 2.- Window showing the list of presets and their position in the memory.
- 3.- Export All Presets: exports all the presets from the PC to the MPX-4088 matrix.
- 4.- Device/Local PC: selects in order to act on the matrix memory or that of the PC.
- 5.- **Copy from:** channel from which the copy is made.
- 6.- Selection of channels to which the copy is applied.

- 7.- Selection of all channels simultaneously.
- 8.- Save: saves the current configuration of the MPX-4088 matrix as a preset in the PC or matrix memory.
- 9.- Delete: eliminates a preset from the MPX-4088 matrix.
- 10.- Load: loads a preset from a PC file or from a matrix memory.
- 11.- Copy: makes a copy of the selected channels.

#### SYSTEM

	App ID: 06 DeviceID: 1	000 Status:		_	_	_	F	irmware Version v0.0	
	Input DSP Channel	Matrix	Output DSP Channel	DUCKER	FBC	AutoMixer	Save/Load/Copy	System	
1—	Relay Control	ıyl Relayli							
2 —	Restore	Default Setting							
3 —		Factory Setting							
4 —	Device Name			Password Setting					
5 —	<b></b>	Default		Lock System	<				
					7				

- 1.- **Relay Control:** controls the contact closures on the rear panel of the **MPX-4088** matrix. Press the button to close the relay(s): the buttons will turn green. Press the button(s) again in order to open the relays.
- 2.- **Restore Default Setting:** restores the matrix to the default configuration.
- 3.- Reset to Factory Setting: eliminates all the configurations, including the default configuration.
- 4.- **Device name:** displays the name of the device.
- 5.- **Change Device Name:** allows the name of the device to be changed.
- 6.- **Password setting:** allows the lock password to be changed.
- 7.- Lock System: allows the device to be locked/unlocked. Note: the default password is 8888.



In Daisy Chain connection mode, the edition mode for the **MPX-400MIC** microphone with zone selector, has the following functions:

	MPX-400MIC Editor									
1—	Connect Status :			App ID: 08	C	eviceID: 1000	Dev	rice Name Device		—14
	Zone Setting	Max Zones Setting	: 18	8				Clear All	Select All	
	01 Zone	MPX-4088	MPX-4088	MPX-4088	MPX-4088	MPX-4088	MPX-4088	MPX-4088	MPX-4	
	02 Zone	1000	1100	1200	1300	1400	1500	1600	170(	
	I 03 Zone	Output 01	Output 01	Output 01	Output 01	Output 01	Output 01	Output 01	Outp	
0	04 Zone	Output 02	Output 02	Output 02	Output 02	Output 02	Output 02	Output 02	Out	
2 —	05 7000	Output 03	Output 03	Output 03	Output 03	Output 03	Output 03	Output 03	Outp	
		I I Cutput 04	Output 04	Output 04	Output 04	Output 04	Output 04	Output 04	Out: I	
	Zone	Output 05	Output 05	Output 05	Output 05	Output 05	Output 05	Output 05	Outp	
	I 07 Zone	Output 06	Output 06	Output 06	Output 06	Output 06	Output 06	Output 06	Out;	
	08 Zone	I I Cutput 07	Output 07	Output 07	Output 07	Output 07	Output 07	Output 07	Out;	
	09 Zone	Output 08	Output 08	Output 08	Output 08	Output 08	Output 08	Output 08	Out;	
	10 Zone	Output 09	Output 09	Output 09	Output 09	Output 09	Output 09	Output 09	Outr	
	11 Zone	I Dutput 10	Output 10	Output 10	Output 10	Output 10	Output 10	Output 10	Out:	
	I 12 Zone	U I I Output 11	Output 11	Output 11	Output 11	Output 11	Output 11	Output 11	Outr	10
	13 Zone	Output 12	Output 12	Output 12	Output 12	Output 12	Output 12	Output 12	Out;	
			A				,,	·		—12
3 —					/		1			
	Priority: 1	Mic Volume: 0	- <del>  0</del>	Vlaster Volume: 0	¢	hime Volume: 0	Chi	ime Time: 0,1S	<b>₹</b> Û	——11
4 —		Load Presst	Save Preset	Load Fro	n Device	Save To Device	Pefa			
		ſ	ſ			ſ				
	5	6	7	8	3	9	10			

- 1.- Max. Zone Setting: maximum number of paging zones, from 12 to 192.
- 2.- Zone Setting: possibility of establishing names for each zone.
- 3.- Selection of zone number assigned to the output of each zone.
- 4.- Priority: selects the priority of this microphone within the system, 1 to 8.
- 5.- Mic. Volume: allows microphone volume to be adjusted.
- 6.- Load Preset: allows the saved configuration to be loaded.
- 7.- Save preset: saves the current configuration.
- 8.- Load from Device: loads the configuration of MPX-400MIC.
- 9.- Save to Device: saves the current configuration in the MPX-400MIC.
- 10.- Default: sets the default configuration.
- 11.- Chime time: sets the duration of the chime, from 0.5 to 12 seconds maximum.
- 12.- Chime volume: allows the chime volume to be adjusted.
- 13.- Master volume: allows the general volume of the MPX-400MIC to be adjusted.
- 14.- Device name: allows the device name to be changed to one that is easily identified.

#### MPX-410ES

In Daisy Chain connection mode, the edition mode for the audio input/output control **MPX-410ES**, allows the device name to be changed within the system.

#### **MPX-420V**

In Daisy Chain connection mode, the edition mode for the remote zone control **MPX-420V**, allows the device name to be changed within the systema.

#### MPX-430VS

In Daisy Chain connection mode, the edition mode for the remote zone control **MPX-430VS**, allows the device name to be changed within the system.

# COMMUNICATION PROTOCOL RS-232 AND TCP/IP

#### To connect via RS-232:

- Connect a cable to the RS-232 port on your computer. You will have to connect the transmission, reception and earth cables from the opposite end of the cable to the matrix on the eurobloc connector labeled RS-232 on the back of the **MPX-4088** matrix.
- Values to be used:
  - Baud Rate: 9600

#### To connect via TCP/IP:

- Connect as a TCP client.
- Connect the computer to the same network as the MPX-4088 matrix
- Values to be used:
  - IP address: the one established for the matrix.
  - Port: 5000

The following are the steps to follow together with the commands you will need to use in this matrix.

NOTE: you can find all updated commands by visiting our website:



	Function	Input Gain	Input Phase	Input Mute	Get Input Status	Receive from: Get Input Status Command	Output Gain	Output Phase	Output Mute	Get Output Status	Receiver from: Get Output Status Command	Input Gain Up , Step=1dB	Dilnput Gain Down , Step=1 dB	Output Gain Up , Step=1dB	Output Gain Down , Step=1dB
	(1 Byte)							0x40							,
		(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte) (1Byte) (1Byte) (1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte) (1Byte) (1Byte) (1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)
Value	(N Bytes)	VOLUME > 0x00-0xBE	PHASE > Normal: 0x00 / Invert: 0x01	MUTE > Off: 0x00 / On: 0x01	Invalid 🕨 0x00	VOLUME > 0x00-0xBE PHASE > Normal: 0x00 / Invert: 0x01 MUTE > Off: 0x00 / On: 0x01 DC48V > Off: 0x00 / On: 0x01	VOLUME > 0x00-0xBE	PHASE > Normal: 0x00 / Invert: 0x01	MUTE > Off: 0x00 / On: 0x01	Invalid > 0x00	VOLUME ► 0x00-0xBE PHASE ► Normal: 0x00 / Invert: 0x01 MUTE ► Off: 0x00 / On: 0x01 Invalid ► 0x00	Invalid > 0x00	Invalid > 0x00	Invalid > 0x00	Invalid d 0x00
		(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)
Channel	Bytes	INPUT CH 1-12 > 0x01-0x0C	INPUT CH 1-12 > 0x01-0x0C	INPUT CH 1-12 \$ 0x01-0x0C	INPUT CH 1-12 \$ 0x01-0x0C	INPUT CH 1-12 & 0x01-0x0C	OUTPUT CH 1-12 > 0x01-0x0C	REOUTPUT CH 1-12 N 0x01-0x0C	OUTPUT CH 1-12 > 0x01-0x0C	OUTPUT CH 1-12 ▶ 0x01-0x0C	OUTPUT CH 1-12 ▶ 0x01-0x0C	INPUT CH 1-12 > 0x01-0x0C	INPUT CH 1-12 > 0x01-0x0C	OUTPUT CH 1-12 > 0x01-0x0C	OUTPUT CH 1-12 > 0x01-0x0C
Command	(2 Bytes)	0×00 0×01	0×00 0×02	0×00 0×03	0x00 0x04	0×00 0×04	0×00 0×05	0×00 0×00	0×00 0×07	0×00 0×08	0×00 0×08	0×00 0×0B	0×00 0×0C	0×00 0×0D	0×00 0×0E
	(2 Bytes)							0xA5 0xE8						-	
Port	(1 Byte)							LAN (TCP/IP) > 0x00 RS-232 Port > 0x70							
Device	(1 Byte)	Matrix ID: 100 > 0x01 Matrix ID: 200 > 0x02 Matrix ID: 200 > 0x23 Matrix ID: 2300 > 0x23 													
	(2 Bytes)							0×00 0×00							
Length	(2 Bytes)	0 ×00 0×10	0 ×00 0×10	0 ×00 0×10	0 ×00 0×10	0x00 0x13	0x00 0x10	0x00 0x10	0x00 0x10	0x00 0x10	0 ×00 0×13	0x00 0x10	0 ×00 0×10	0 ×00 0×10	0 ×00 0×10
	(3 Bytes)							0x01 0x20 0x03		I		I			
	No	-	N	e	4	ى س	9	~	œ	თ	9	=	12	13	14

	Function	Matrix Mixer	Get Matrix Mixer Status	Receiver From: Get Matrix Mixer Status Command	Input DC-48 V	Relay Control	Get Relay Status	Receiver From: Get Relay Status Command	Modify Device Name	Get Device information	Receive Device information	Recall Preset
	(1 Byte)		<u> </u>	0X40	<u></u>	<u> </u>						
		(1Byte)	(1Byte)	(1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)
Value	(N Bytes)	ROUTING > Off. 0x00 / On: 0x01	Invalid -> 0x00	LOCAL NPUT 01 > Off: 0x00 / On: 0x01 LOCAL NPUT 02 > Off: 0x00 / On: 0x01 LOCAL NPUT 03 > Off: 0x00 / On: 0x01 LOCAL NPUT 03 > Off: 0x00 / On: 0x01 LOCAL NPUT 05 > Off: 0x00 / On: 0x01 LOCAL NPUT 09 > Off: 0x00 / On: 0x01 LOCAL NPUT 09 > Off: 0x00 / On: 0x01 LOCAL NPUT 19 > Off: 0x00 / On: 0x01 NETWORK NPUT 03 > Off:0x00/On: 0x01 NETWORK NPUT 04 > Off:0x00/On: 0x01 NETWORK NPUT 05 > Off:0x00/On: 0x01	DC-48V ♦ Off: 0x00 / On: 0x01	RELAY d Off: 0x00 / On: 0x01	Invalid > 0x00	RELAY 02 > Off: 0x00 / On: 0x01	Invalid ► 0x00	Invalid > 0x00	FIRMWARE VERSION d 0x10 - 0x99	Invalid ► 0x00
		(1Byte) (1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)
Channel	Bytes	OUTPUT CHANNEL > 0x01-0x14 INPUT CHANNEL > 0x01-0x14	OUTPUT CH ▶ 0x01-0x14	OUTPUT CH > 0x01-0x14	INPUT CH 1-12 > 0x01-0x0C	RELAY ► Relay 1: 0x01 / Relay 2:0x02 (1 Byte)	Invalid > 0x00	RELAY 01 > Off: 0x00 / On: 0x	DEVICE NAME > 16 char ASCII Code	Invalid ▶ 0x00 (1 Byte)	DEVICE NAME > 16 char ASCII Code	PRESET NUMBER > 0x01-0x18
Command	(2 Bytes)	60X0 00X0	0×00 0×0A	0x00 0x0A	0x00 0x0F	0x00 0x10	0x00 0x11	0x00 0x11	0x00 0x12	0x00 0x13	0x00 0x13	0x00 0x14
	(2 Bytes)			0 0x A5 0 x A5								
Port	(1 Byte)			LAN (TCP/IP) ► 0x00 HS-232 Port ► 0x70								
Device	(1 Byte)	(1 Byte) Matrix (D: 100 • 0x01 Matrix (D: 200 • 0x23 Matrix (D: 200 • 0x23 										
	(2 Bytes)			0x00 0x06								
Length	(2 Bytes)	0x00 0x11	0×00 0×10	0×00 0×23	0×00 0×10	0×00 0×10	0x00 0x10	0x00 0x10	0×00 0×10	0x00 0x10	0x00 0x1F	0×00 0×10
	(3 Bytes)			0×01 0×20 0×03	I		1			1		
	٩ ٧	15	16	4	18	6	20	51	22	23	24	25

# FIRMWARE UPDATING

To update the firmware of the MPX-4088, MPX-400MIC, MPX-410ES, MPX-420V, MPX-430VS and MPX-440X

go to the Software section to download the Firmware Update Tool.

Connect your PC to the same network as the matrix **MPX-4088**, execute the firmware update tool and follow the steps below:

- 1.- Press the SETUP button and select the IP of the device to be updated.
- 2.- Then, press the Connect button. If the connection has been made correctly, the connection indicator will turn green and all the devices connected to the matrix will be displayed.

IP Settings: IP: 192.168.200.120 Port: 5000 Connect Setup	IP Settings: IP: 192.168.200.120 Port: 5000 Disconnect Setup					
Device Name App ID Device ID Firmware Version Status	Device Name         App ID         Device ID         Firmware Version         Status           MPX-4088         06         1000         Mcu: 1.5 DSP: 1.2         True           MPX-400MIC         08         1050         Mcu: 1.5         True           MPX-400MIC         08         1050         Mcu: 1.5         True           MPX-400MICA         08         1060         Mcu: 1.5         True           MPX-400MICA         08         1060         Mcu: 1.5         True           MPX-420V         09         1000         Mcu: 1.5         True					
Current Select index: 0 Total Device: 0 Read DSP Firmware Update	Current Select index : 0 Total Device : 5 Read DSP Firmware Update					

3.- Select the device you wish to update, click on Firmware Update and then on Update Firmware to proceed with the update.

Devinto: Ann ID:06 Device ID:1000 Device Name:MPX-4088		1
		Progress: 0
Update Firmware		Import All Presets
Update status: DSP firmware updating successfully	]	Import all preset type from device to computer file
Processing Information:		
Processing Information: The Device is Kebooting - Please wait 4 seconds		Progress: 0
Processing Information: The Device is Rebooting . Please wait 4 seconds The Device is Rebooting . Please wait 3 seconds	~	Progress: 0
Processing Information: The Device is Rebooting - Please wait 4 seconds The Device is Rebooting - Please wait 3 seconds The Device is Rebooting - Please wait 2 seconds	~	Progress: 0
Processing Information: The Device is Rebooting - Please wait 4 seconds The Device is Rebooting - Please wait 3 seconds The Device is Rebooting - Please wait 2 seconds The Device is Rebooting - Please wait 1 seconds	^	Progress: 0 Export All Presets
Processing Information: The Device is Rebooting - Please wait 4 seconds The Device is Rebooting - Please wait 3 seconds The Device is Rebooting - Please wait 2 seconds The Device is Rebooting - Please wait 1 seconds The Device is Rebooting - Please wait 0 seconds	^	Progress: 0 Export All Presets Export all preset type
Processing Information: The Device is Rebooting . Please wait 4 seconds The Device is Rebooting . Please wait 3 seconds The Device is Rebooting . Please wait 2 seconds The Device is Rebooting . Please wait 1 seconds The Device is Rebooting . Please wait 0 seconds Begin update MCU2 now	^	Progress: 0 Export All Presets Export all preset type from computer to
Processing Information: The Device is Rebooting . Please wait 4 seconds The Device is Rebooting . Please wait 3 seconds The Device is Rebooting . Please wait 2 seconds The Device is Rebooting . Please wait 1 seconds The Device is Rebooting . Please wait 0 seconds Begin update MCU2 now begin update MCU2 firmware,wait	~	Progress: 0 Export All Presets Export all preset type from computer to device
Processing Information: The Device is Rebooting . Please wait 4 seconds The Device is Rebooting . Please wait 3 seconds The Device is Rebooting . Please wait 2 seconds The Device is Rebooting . Please wait 1 seconds The Device is Rebooting . Please wait 0 seconds Begin update MCU2 now begin update MCU2 firmware,wait begin update DSP firmware,wait	~	Progress: 0 Export All Presets Export all preset type from computer to device

4.- Wait until the update has finished and then restart the device.



# **TECHNICAL SPECIFICATIONS**

	MPX-4088
FEATURES	<ul> <li>Audio matrix with 8 analogue input channels to 8 output zones.</li> <li>4 configurable input/output digital channels for use with controls mod.</li> <li>MPX-400MIC, MPX-410ES, MPX-430VS.</li> <li>Optional zone controls, mod. MPX-420V and MPX-430VS for program selection in the zone where the program is broadcast.</li> <li>PC control software.</li> <li>LED indicators for power, bus occupation, signal and failure.</li> <li>LCD information display.</li> <li>Microphone with priority and optional zone selection mod. MPX-400MIC.</li> <li>DANTE compatible.</li> </ul>
INPUTS	<ul> <li>8 balanced line, euroblock 6,800 Ω, 7.74 Vrms maximum</li> <li>2 RD ports, for mod. MPX-400MIC, MPX-410ES, MPX-420V, MPX-430VS,</li> <li>MPX-440X o MPX-460P, RJ-45</li> <li>1 RC-Net port for matrix interconnection, RJ-45</li> <li>1 LAN port for connection to local area network, RJ-45</li> </ul>
OUTPUTS	8 balanced lines, euroblock 240 Ω, 7.74 Vrms maximum 2 RD ports, for mod. <b>MPX-420V</b> , <b>MPX-430VS</b> , <b>MPX-410ES</b> , <b>MPX-400MIC</b> or MPX-440X, RJ-45 1 extension link, RC-Net, RJ-45 RS-232 port, euroblock
CONTROLS	PC control software (input and output routing, DSP functions, equalization, noise gates, compressor, gain control, etc.) TCP/IP and RS-232 protocol for integration with other systems
RESPONSE	20-20,000 Hz ±1.5 dB
DISTORTION	Harmonic: < 0.01%
S/N RATIO	Microphone > 102 dB Lines > 107 dB
PHANTOM	48 V in inputs 1 to 8, selectable with software
PRIORITY	Microphone with optional zone selector mod. <b>MPX-400MIC</b> Inputs 1 to 8 through level, selectable with software
POWER SUPPLY	100-240 V AC, 80 W
DIMENSIONS	483 x 44 x 256 mm depth. 1 U 19" rack
OPTIONAL	MPX-400MIC: microphone with zone selector MPX-410ES: audio input/output control MPX-420V: zone control MPX-430VS: zone control with stereo output MPX-440X: RD port extender MPX-450D: DANTE module MPX-460P: touch screen control

	MPX-400MIC
FEATURES	Microphone with zone selector.
	Musical alert tones.
	Selection of zones and broadcasting of announcements in the audio matrix mod. <b>MPX-4088</b> .
	Power, signal, saturation and communication status indicator lights.
	LCD information screen.
	PC control software, customisation of zone names, microphone volume, volume
	and duration of musical tone and priority.
MICROPHONE	Electret condenser with flexo and ring light
INPUTS	1 balanced microphone, XLR 6.800 Ω
	1 mini-USB port for uploading music alert tones in MP3 or WAV format
	1 RD port for connection to MPX-4088 matrix, RJ-45
CONTROLS	Microphone volume control and zone selector
CONNEXION	RJ-45 cable, Cat 5e
PHANTOM	12 V
POWER SUPPLY	24 V DC, 100 mA, via RD port
DIMENSIONS	Microphone with flexo: 430 mm high
	Base: 176 x 53 x 166 mm depth
ACCESSORIES	Foam windshield

	MPX-410ES
FEATURES	Audio input/output control for audio matrix mod. <b>MPX-4088</b> . 2 input channels and 2 output channels. Converts and transmits digital audio to RD port. Signal presence and saturation LED indicators for the inputs and outputs.
INPUTS	<ol> <li>balanced mic., XLR 5,100 Ω, assignable to channels 10 or 12.</li> <li>stereo RCA line, 5,100 Ω, 7.74 V, assignable to channels 9/10 or 11/12.</li> <li>RD port for connection to matrix <b>MPX-4088</b>, RJ-45</li> </ol>
OUTPUTS	2 balanced line, euroblock 240 $\Omega,$ 7.74 V, assignable to digital channels 9/10 or 11/12
CONTROLS	Microphone volume control Phantom power supply, selectable
CONNEXION	RJ-45, Cat 5e cable
PHANTOM	48 V
POWER SUPPLY	24 V DC, 100 mA, via RD port
DIMENSIONS	147 x 86 x 47 mm depth
ACCESSORIES	Surface box

	MPX-420V					
FEATURES	Remote volume and zone allocation controller for audio matrix mod. <b>MPX-4088</b> . Connection to the matrix via RJ-45, Cat 5e cable. Link extension for connection of up to 8 <b>MPX-420V</b> controllers in series. LCD display with volume level information for the selected output.					
INPUTS	1 RD port for connection to matrix MPX-4088, RJ-45					
OUTPUTS	1 link extension, RJ-45					
CONTROLS	Volume and zone allocation control					
CONNEXION	RJ-45, Cat 5e cable					
POWER SUPPLY	24 V DC, 100 mA, via RD port					
DIMENSIONS	147 x 86 x 47 mm depth					
ACCESSORIES	Surface box					

	MPX-430VS					
FEATURES	Volume control with two balanced audio outputs and zone allocation for audio matrix mod. <b>MPX-4088</b> . Connection to RD ports. Connection to the matrix via RJ-45, Cat 5e cable. LCD display with volume level information for the selected output.					
INPUTS	1 RD port for connection to matrix MPX-4088, RJ-45					
OUTPUTS	2 balanced line, euroblock, 240 $\Omega$ , 7.74 V, assignable to digital channels 9/10 or 11/12.					
CONTROLS	Volume control and zone allocation					
CONNEXION	RJ-45, Cat 5e cable					
POWER SUPPLY	24 V DC, 100 mA, RD port					
DIMENSIONS	147 x 86 x 47 mm depth					
ACCESSORIES	Surface box					

	MPX-460P				
FEATURES	Remote volume control, zone allocation and scenes touch screen for audio matrix mod. <b>MPX-4088</b> . Connection to the matrix via RJ-45, Cat 5e cable and link for connection of up to 8 <b>MPX-460P</b> in series. LCD touch screen.				
INPUTS	1 RD port for connection to MPX-4088 matrix, RJ-45				
OUTPUTS	1 extension link, RJ-45				
CONTROLS	Volume control, zone and scene allocation				
POWER SUPPLY	24 V CC, 100 mA, RD port with direct connection from the matrix. 24 V CC, 300 mA, Euroblock, for connection of more <b>MPX-460P</b> in series.				
DIMENSIONS	150 x 115 x 25 mm depth				
ACCESSORIES	Surface box				

	MPX-440X
FEATURES	4 RD port extender for audio matrix mod. <b>MPX-4088</b> . Connections via RJ-45, Cat 5e cable. LED power and connection indicators for each port.
INPUTS	1 RD port for connecting to matrix MPX-4088, RJ-45
OUTPUTS	1 RD audio port for connecting mod. <b>MPX-400MIC</b> , <b>MPX-410ES</b> or <b>MPX-430VS</b> , RJ-45 3 RD control ports for connecting mod. <b>MPX-420V</b> or <b>MPX-460P</b> , RJ-45
CONNECTION	RJ-45, Cat 5e cable
POWER SUPPLY	24 V DC, 1 A, euroblock
MEDIDAS	196 x 44 x 135 mm depth



#### SOFTWARE DE CONFIGURATION ET CONTRÔLE

La matrice **MPX-4088** se configure avec le software pour PC. Pour télécharger lel software, allez sur notre **MPX-4088**. Ensuite, ouvrez la fenêtre "Software" pour

télécharger le fichier à votre ordinateur et installez le software. Ce software est compatible avec Windows 7 ou supérieur. Le software a deux modes de connexion pour la configuration de la matrice.



1.- Daisy chain network mode: permet la configuration de la matrice MPX-4088, ainsi que les modèles optionnels MPX-400MIC, MPX-410ES, MPX-420V et MPX-430VS. Dans ce mode d'édition, le PC et la matrice MPX-4088 doivent être connectés directement par câble RJ-45 et, le sélecteur LAN/ RC-Net placé sur le panneau arrière de la matrice, doit être sur la position LAN.



- Il est nécéssaire d'établir l'adresse IP de la matrice. Pour cela, cliquer sur le bouton SETUP et, ensuite, sur SCAN pour commencer la recherche automatique de l'adresse IP et MAC de la matrice **MPX-4088**.

		~		
Device Scan below IP	MAC		Device Scan below IP	MAC
			192.168.1.244	00-A1-B0-00-0B-4B
9.44			Citation (	
State:	ort: 5000		State: JP: 192.168.1.244	Port: 5000

Sélectionnez la ligne avec l'adresse IP et MAC de la matrice **MPX-4088** et cliquez sur APPLY. Ensuite, cliquez sur CONNECT et l'indicateur STATUS passera au vert. Ajoutez les dispositifs situés sur la barre latérale, les faisant glisser sur la partie grise.

F MPX-4088 v1.0.6	
System About	Connect Setup Status:
ConfigDeviceList MFX-408 MFX-4008 MFX-4008 MFX-41029 MFX-41029 MFX-400MIC	Device D 1000 • • • • • • • • • • • • • • • • • • •

Faites double clic sur le module du dispositif souhaité pour accéder au mode d'édition.

**N.B.** : quand il y a plusieurs matrices connectées en cascade, le connecteur LAN/RC-Net doit être sur la position LAN de la matrice connectée directement au PC, et sur la position RC-Net pour le reste des matrices connectées entre elles. Pour accéder à la configuration de chaque dispositif, il est nécéssaire d'établir l'ID du dispositif manuellement appuyant sur le bouton droit du dispositif à configurer et accédant ainsi à "Change Device ID".



2.- Star network mode : permet la configuration et le contrôle individuel de plusieurs matrices MPX-4088 connectées à un même router. Dans ce mode d'édition, le PC et la matrice MPX-4088 doivent être connectés au router par câble RJ-45 et, le sélecteur LAN/RC-Net placé sur le panneau arrière de la matrice, doit être sur la position LAN.

Dans ce mode d'édition, le système détecte automatiquement les matrices **MPX-4088** connectées au réseau pour sa configuration et contrôle.



# **MODE ÉDITION**

#### **MPX-4088**

Le mode édition de la matrice **MPX-4088** permet d'éditer en temps réel les paramètres du processus du signal d'entrée/sortie, attribution de sources aux zones, atténuation des entrées par niveau de signal, annulation de feedback, auto-mix, enregistrer et télécharger presets, activer/désactiver relais, changer le nom du dispositif et rétablir les valeurs d'origine. Par défaut, la fenêtre visible est **Input DSP Channel.** 

#### **INPUT DSP CHANNEL**



#### 1.- MODULE EXP/GATE:

Ajoute une dynamique au signal pour chaque canal d'entrée. Quand le signal d'entrée est en dessous du seuil (Threshold), l'extenseur l'augmente avec la valeur de ratio réglée. Si le signal est au dessus du seuil, la sortie reste identique. Réglant la valeur du ratio au maximum (Limit), l'extenseur se transforme en une porte de bruit.

- a.- Viseur graphique du module EXP/GATE.
- b.- **Release :** temps de libération de l'extenseur quand le signal passe par dessus del la valeur du seuil.
- c.- Ratio : ratio d'amplification entre le signal d'entrée et le signal amplifié.
- d.- **Threshold :** valeur du seuil. Le signal en dessous de cette valeur sera amplifié selon le ratio de l'amplification sélectionné.
- e.- **Attack :** temps de réaction de l'extenseur quand le signal d'entrée est par dessous du valeur du seuil.
- f.- **Bypass :** le signal d'entrée n'est pas traité et passe au module suivant de traitement.
- g.- Default : rétablie les valeurs par défaut du module EXP/GATE.



#### 2.- MODULE ALIMENTATION PHANTOM

- a.- **DC 48 V :** perme d'activer/désactiver l'alimentation phantom pour chaque canal d'entrée.
- b.- Microphone Sensitivity : permet de régler la sensibilité du microphone.
- c.- Polarity : permet d'inverser la phase du signal d'entrée à 180°.

#### 3.- CANAUX D'ENTRÉE/SORTIE

- a.- Sélecteur de canal d'entrée/sortie (CH1 CH12).
- b.- Mute : met en silence le canal d'entrée/sortie correspondant.
- c.- Fader numérique de niveau de signal (-80 a +15dBu).
- d.- Indicateur lumineux de niveau de signal du canal d'entrée/sortie.
- e.- Indique la valeur du gain appliqué au canal d'entrée/sortie.

#### 4.- MODULE DE RETARD

- a.- Delay : retard appliqué au signal du correspondant au canal d'entrée/sortie, en ms.
- b.- Bypass : le signal d'entrée n'est pas traité et passe au module suivant de traitement.

#### 5.- MODULE D'ÉGALISATION

Filtres passe-haut et passe-bas pour éliminer les fréquences au-dessus ou en dessous de la fr´quence de coupure établie.

- a.- Freq. : fréquence de coupure.
- b.- **Type :** type de filtre appliqué : Bessel, Linkwitz ou Butterworth.

Égalisation paramètrique de 5 bandes. Permet de modifier le spectre du signal d'entrée de forme graphique ou introduisant les valeurs souhaitées manuellement.

- c.- Frequency : fréquence centrale.
- d.- **Qfact :** facteur de qualité du filtre. Plus la valeur est élevée, le rang de fréquences affecté est moindre.
- e.- Flat : tous les paramètres d'égalisation sont rétablis à sa valeur d'origine.
- f.- Bypass : le signal d'entrée n'est pas traité et passe au module suivant de traitement.
- g.- Gain : élevation ou atténuation du gain de la fréquence centrale établie.
- h.- **Type :** type de filtre, de pic, passe-bas ou passe-haut.
- i.- **Bypass 1~5 :** permet d'annuler temporairement le traitement des filtres 1 à 5 sans utiliser le bypass général.

#### 6.- MODULE DE COMPRÉSSION

Limite la dynamique du signal pour chaque canal d'entrée. Quand le signal excède le seuil (Threshold), il est comprimé dans un ratio supérieur à 1. En dessous du seuil, le comprésseur ne modifie pas le signal. Réglant le ratio à sa valeure maximale (Limit), le comprésseur se transforme en un limiteur.

- a.- Viseur graphique du module Compressor.
- b.- **Threshold** : valeur du seuil, le signal au dessus de cette valeur sera comprimée selon le ratio de compréssion sélectionné.
- c.- **Attack :** temps de réaction du comprésseur quand le signal d'entrée está au dessus de la valeur du seuil.
- d.- Ratio : ratio de compréssion entre le signal d'entrée et le signal comprimé.
- e.- **Release :** temps de libération du comprésseur quand le signal passe au dessus de la valeur du seuil.
- f.- Flat Comp : établie les valeurs par défaut du module Compressor.
- g.- Bypass : le signal d'entrée n'est pas traité et passe au module suivant de traitement.

# Sign Pass Fabre Sign Pass Pabe Sign P

C

a h





## MATRIX

App ID: 06 DeviceID: 1000 Status: Output DSP Channel DUCKER FBC AutoMixer Save/Load/Copy System	F MPX-4088 Editor					-	×
Input DSP Channel     Matrix     Output DSP Channel     DUCKER     FBC     AutoMixer     Save/Load/Copy     System	App ID: 06 DeviceID: 1000 Sta	atus:			Firm	ware Version v0.0	 -
Input         Nato           Nato         0017           Nato </td <td>Input DSP Channel Mat</td> <td>trix Output DSP Channel</td> <td>DUCKER</td> <td>FBC</td> <td>AutoMixer Save/Load/Copy</td> <td>System</td> <td></td>	Input DSP Channel Mat	trix Output DSP Channel	DUCKER	FBC	AutoMixer Save/Load/Copy	System	
		Ut N01 N02 N03 N04 N05 N06 N07 N07 N07 N07 N08 N07 N07 N07 N07 N07 N07 N07 N07			Net O7		

Avec la fonction MATRIX, les entrées s'attribuent aux sorties. Cliquant sur les rectangles gris, ceux-ci passeront au vert, indicant la correcte attribution du canal d'entrée à la sortie souhaitée.

IN/OUT 1~8 : correspondent aux entrées/sorties d'audio analogiques disponibles sur le panneau arrière. IN/OUT 9~12 : correspondent aux entrées/sorties d'audio numériques (ports RD) pour les modèles **MPX-400MIC, MPX-410ES** et **MPX-430VS**, disponibles sur le panneau arrière.

IN/OUT NET 1~8 : correspondent aux entrées/sorties de broadcast.

#### **OUTPUT DSP CHANNEL**

Même menu que Input DSP Channel mais sans le module expansor et d'alimentation phantom. L'égalisation paramétrique est de 8 bandes au lieu de 5.

#### DUCKER



La fonction DUCKER permet d'atténuer un ou plusieurs canaux d'entrée en fonction du niveau du signal des canaux avec priorité.

#### Source Select

1.- Local Input : sélection des canaux d'entrée avec priorité.

#### **BGM Setting**

- 2.- Local input : sélection des canaux d'entrée à atténuer.
- 3.- Network Input : sélection des entrées de broadcast à atténuer.

# FR

#### **Ducking Controller**

- 4.- Threshold : seuil d'atténuation.
- 5.- Depth : profondeur d'atténuation.
- 6.- Attack : temps de réaction pour atténuer les canaux sélectionnés.
- 7.- Release : temps de libération des canaux sélectionnés.
- 8.- Default : rétablie les valeurs par défaut.
- 9.- Bypass : le signal d'entrée n'est pas traité et passe au module suivant de traitement.

#### FEEDBACK CANCELLER FBC



La fonction Feedback Canceller élimine la réalimentation produite par microphones proches aux hautsparleurs automatiquement.

#### **FBC Input Select**

- 1.- Local Input : sélection des canaux d'entrée à traiter.
- 2.- Network input : sélection des canaux broadcast d'entrée à traiter.

#### **FBC Setting**

- 3.- Filter Release : temps de libération du filtre dynamique après traiter le signal.
- 4.- **FBC Mode :** mode d'application, pour musique (music) ou pour parole (speech).

#### **FBC Setup**

- 5.- Static Filters Setup : configuration du volume pour obtenir le feedback.
- 6.- **FBC filters :** 24 filtres pour l'annulation du feedback.
- 7.- Clear Dynamic Filters : relance tous les filtres dynamiques.
- 8.- Clear All Filters : relance tous les filtres , statiques et dynamiques.
- 9.- Bypass : le signal d'entrée n'est pas traité et passe au module suivant de traitement.

#### FBC Output Assign

10.- Local Output : canaux de sortie correspondants aux entrées sélectionnées pour traiter.

11.- Network output : canaux de sortie broadcast correspondants aux entrées à traiter.

La configuration du FBC est manuelle. Elle consiste à trouver les fréquences de résonance à éliminer. Une fois les fréquences trouvées, le système décidera automatiquement les filtres appropriés.

Pour la configuration du FBC, les microphones doivent être connectés et ouverts. Il faut bouger le fader du FBC (4) jusqu'à arriver au feedback. Quand le système détecte le feedback, les indicateurs 1 à 24 passeront au rouge pour filtres statiques et vert pour filtres dynamiques.



La fonction AutoMixer réduit le niveau d'un microphone quand il ne s'utilise pas. Idéal pour salles de conférences, théâtres, etc.

Cette fonction peut se combiner avec la fonction Ducker, faisant ainsi, de plus, une priorité.

1.- Local input : sélection des canaux d'entrée à traiter.

#### **Active Time**

- 2.- ON/OFF : active/désactive le temps d'atténuation.
- 3.- Établit le temps d'atténuation.

#### SAVE/LOAD



Depuis la fenêtre SAVE/LOAD vous pouvez garder/charger les configurations comme presets. Ces données peuvent être gardés dans la mémoire interne de la matrice, ou bien aussi dans le PC. La mémoire de la matrice **MPX-4088** a une capacité pour un total de 16 presets.

- 1.- Import All Presets : importe les presets de la matrice MPX-4088 à un fichier du PC.
- 2.- Fenêtre où se trouve la liste de presets et la position de mémoire.
- 3.- Export All Presets : exporte les presets du PC à la matrice MPX-4088.
- 4.- Device/Local PC : sélectionne pour agir dans la mémoire de la matrice ou du PC.
- 5.- Copy from : canal depuis leugel se réalise la copie.
- 6.- Sélection des canaux auxquels s'applique la copie.
- 7.- Sélection de tous les canaux simultanément.

# FR

- 8.- Save : garde la configuration actuelle de la matrice MPX-4088 comme un preset dans le PC ou mémoire de la matrice.
- 9.- Delete : élimine un preset de la matrice MPX-4088.
- 10.- Load : charge un preset depuis un fichier du PC ou depuis une mémoire de la matrice.
- 11.- Copy : réalise la copie aux canaux sélectionnés.

#### SYSTEM

	App ID: 06 DeviceID: 1000	Status:						irmware Version v0.0	
	Input DSP Channel	Matrix	Output DSP Channel	DUCKER	FBC	AutoMixer	Save/Load/Copy	System	
1 —	Relay Control	Relayll							
2 —	Restore Defa	ult Setting							
3—	Device Name	ory Setting							
4 —		_		Password Setting					
5 —	Defa	JI		Lock System	•				
			6		 7				

- 1.- Relay Control : contrôle les vérrouillages de contacts du panneau arrière de la matrice MPX-4088. Appuyez sur le bouton pour fermer le/les relais : les boutons passent au vert. Appuyez de nouveau sur le/les boutons pour ouvrir les relais.
- 2.- Restore Default Setting : rétablit la matrice à la configuration par défaut.
- 3.- Reset to Factory Setting : élimine toutes les configurations, également celle par défaut.
- 4.- Device name : indique le nom du dispositif.
- 5.- Change Device Name : permet de changer le nom du dispositif.
- 6.- **Password Setting :** permet de changer le mot de passe de blocage.
- 7.- Lock System : permet de bloquer/débloquer le dispositif.N.B. : le mot de passe par défaut est 8888.

#### MPX-400MIC

En mode connexion Daisy Chain, le mode édition pour le microphone avec sélecteur de zones **MPX-400MIC**, offre les fonctions suivantes :

	MPX-400MIC Editor					- 🗆 X	
	Connect Status :						
1—			App ID: 08	DeviceID: 1	000 Device	Name Device	14
	Zone Setting	Max Zones Setting:	18		Clea	r All Select All	
	01 Zone	MPX-4088	MPX-4088 MPX-4088	MPX-4088 MPX-4	4088 MPX-4088	MPX-4088 MPX-4	
	02 Zone		1100 1200	1300 140	0 1500	1600 1700	
	03 Zone	Output 01	Output 01 Output 01	Output 01 Outp	out 01 Output 01	Output 01 Outp	
~	04 Zone	Output 02	Output 02 Output 02	Output 02	put 02 Output 02	Output 02	
2 —		Output 03	Output 03 Output 03	Output 03	put 03 Output 03	Output 03 Outp	
	Zone	II Output 04	Output 04 Output 04	Output 04 Out	put 04 📃 Output 04	Output 04 Outp I	
	Zone	Output 05	Output 05 Output 05	Output 05 Out	put 05 📃 Output 05	Output 05 Outp	
	I 07 Zone	Output 06	Output 06 Output 06	Output 06 Out	put 06 📃 Output 06	Output 06 Outp	
	08 Zone	II 🔲 Output 07 📒	Output 07 Output 07	Output 07 Out	put 07 📃 Output 07	Output 07 Output I	
	09 Zone	Output 08	Output 08 Output 08	Output 08 Out	put 08 📃 Output 08	Output 08 Outp	
	10 Zone	Output 09	Output 09 Output 09	Output 09 Out	put 09 📃 Output 09	Output 09 Outp	
	11 Zone	I I Output 10	Output 10 Output 10	Output 10 Out	put 10 🗾 Output 10	Output 10 Outp	
	I 12 Zone	U Output 11	Output 11 Output 11	Output 11 Out	put 11 🗾 Output 11	Output 11	10
	I 13 Zone	Output 12	Output 12 Output 12	Output 12 Out	put 12 🔲 Output 12	Output 12 Outp	13
							—12
3 —	<u></u>		<u></u> ,				
-	Priority:	Mic Volume: 0	Master Volume: 0	Chime Volum	ne: 0 Chime	Time: 0,1S	——11
4 —		Load Preset Sa	ve Preset Load Fro	m Device Save To I	Device		
							l
	5	6	7	8 9	10		

- 1.- Max. Zone Setting : numéro maximum de zones pour émission d'avertissements, de 12 à 192.
- 2.- Zone Setting : possibilité d'établir les noms pour chaque zone.
- 3.- Sélection du numéro de zone attribué à la sortie de chaque matrice.
- 4.- Priority : sélectionne la priorité de ce microphone dans le système, 1 à 8.
- 5.- Mic. Volume : permet de régler le volume du microphone.
- 6.- Load Preset : permet de charger une configuration enregistrée.
- 7.- **Save preset :** enregistre la configuration actuelle.
- 8.- Load from Device : charge la configuration du MPX-400MIC.
- 9.- Save to Device : enregistre la configuration actuelle en el MPX-400MIC.
- 10.- Default : établit la configuration par défaut.
- 11.- Chime time : eétablit la durée de la tonalité d'avertissement, de 0'5 à 12 secondes maximum.
- 12.- Chime volume : permet de régler le volume de la tonalité d'avertissement.
- 13.- Master volume : permet de régler le volume général du MPX-400MIC.
- 14.- Device name : permet de changer le nom du dispositif pour une identification simple.

#### MPX-410ES

En mode connexion Daisy Chain, le mode édition pour la commande d'entrée/sortie audio **MPX-410ES**, permet de changer le nom du dispositif dans le système.

#### **MPX-420V**

En mode connexion Daisy Chain, le mode édition pour la commande de contrôle de zone **MPX-420V**, permet de changer le nom du dispositif dans le système.

#### MPX-430VS

En mode connexion Daisy Chain, le mode édition pour la commande de contrôle de zone **MPX-430VS**, permet de changer le nom du dispositif dans le système.

# **FR** PROTOCOLE DE COMMUNICATION RS-232 ET TCP/IP

#### Pour se connecter par RS-232 :

- Connectez un câble au port RS-232 de votre ordinateur. Vous devrez connecter les câbles de transmission, réception et masse de l'autre extrême du câble à la matrice dans le connecteur euroblock identifié par RS-232 de l'arrière de la matrice **MPX-4088**.
- Valeurs à utiliser :
  - Baud Rate : 9600

#### Pour se connecter par TCP/IP :

- Connectez-vous comme client TCP.
- Connectez l'ordinateur au réseau où se trouve la matrice MPX-4088.
- Valeurs à utiliser :
  - Dirección IP : celle établie pour la matrice
  - Port : 5000

À continuation, nous vous indiquons les actions ainsi que les commandes que vous pouvez utiliser dans cette matrice.

#### **N.B.**: vous pouvez trouver toutes les commandes mises à jour:

_															
	Fonction Modification du gain d'entrée X		Déphasage d'entrée X	Coupure de l'entrée X	Demande de retour d'information sur l'état de l'entrée X	Réponse avec information sur l'état de l'entrée X	Gain de sortie du commutateur X	Déphasage de sortie X	Coupure de la sortie X	Demande d'Information sur l'état des sorties X	Réponse avec information sur l'état de la sortie X	Augmenter le gain d'entrée de 1 dB X	Diminuer le gain d'entrée de 1 dB X	Augmenter le gain de sortie de 1 dB X	Diminuer le gain de sortie de 1 dB X
	(1 Byte)	(1 Byte) 0 x40 1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2													
		(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte) (1Byte) (1Byte) (1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte) (1Byte) (1Byte) (1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)
Valeur	(N Bytes)	VOLUME > 0x00-0xBE	PHASE > Normal: 0x00 / Invert: 0x01	MUTE > Off: 0x00 / On: 0x01	Invalid 🕨 0x00	VOLUME > 0x00-0xBE PHASE > Normal: 0x00 / Invert: 0x01 MUTE > Off: 0x00 / On: 0x01 DC48V > Off: 0x00 / On: 0x01	VOLUME ► 0x00-0xBE	PHASE > Normal: 0x00 / Invert: 0x01	MUTE > Off: 0x00 / On: 0x01	Invalid > 0x00	VOLUME > 0x00-0xBE PHASE > Normal: 0x00 / Invert: 0x01 MUTE > 0ff: 0x00 / On: 0x01 Invalid > 0x00	Invalid > 0x00	Invalid ▶ 0x00	Invalid > 0x00	Invalid > 0x00
		(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)
Chaîne	Bytes	INPUT CH 1-12 ▶ 0x01-0x0C	INPUT CH 1-12 > 0x01-0x0C	INPUT CH 1-12 d 0x01-0x0C	INPUT CH 1-12 > 0x01-0x0C	INPUT CH 1-12 ▶ 0x01-0x0C	OUTPUT CH 1-12 > 0x01-0x0C	REOUTPUT CH 1-12 N 0x01-0x0C	OUTPUT CH 1-12 > 0x01-0x0C	OUTPUT CH 1-12 > 0x01-0x0C	OUTPUT CH 1-12 ▶ 0x01-0x0C	INPUT CH 1-12 > 0x01-0x0C	INPUT CH 1-12 > 0x01-0x0C	OUTPUT CH 1-12 > 0x01-0x0C	OUTPUT CH 1-12 d 0x01-0x0C
Commande	(2 Bytes)	0x00 0x01	0x00 0x02	0×00 0×03	0x00 0x04	0x00 0x04	0×00 0×05	0000 0000	0×00 0×02	0×00 0×08	0x00 0x08	0x00 0x0B	0×00 0×0C	Q0X0 00X0	0×00 0×0E
	(2 Bytes)			1			1	0xA5 0xE8					1		1
Port	(1 Byte)							LAN (TCP/IP) > 0x00 RS-232 Port > 0x70							
Dispositif	(1 Byte)						Matrix ID: 100 > 0x01	Matrix ID: 200 ♦ 0x02 Matrix ID: 1000 ♦ 0x10 Matrix ID: 2300 ♦ 0x23							
	(2 Bytes)							0×00 0×06							
Longueur	(2 Bytes)	0 ×00 0×10	0 x00 0x10	0 ×00 0×10	0 x00 0x10	0x00 0x13	0x00 0x10	0×00 0×10	0×00 0×10	0x00 0x10	0 x00 0x13	0×00 0×10	0 x00 0x10	0 x00 0x10	0 ×00 0×10
	(3 Bytes)							0x01 0x20 0x03							
	Ŷ	-	2	e	4	ى س	9	~	œ	6	10	÷	4	5	4

FR

FI	R											
	Fonction	Affectation des entrées aux sorties	Demande d'informations sur les entrées affectées à la sortie X	Réponse avec informations sur les entrées affectées à la sortie X	Activation/désactivation de l'alimentation fantôme de l'entrée X (48 V)	Activation/désactivation du relais X	Demande d'information sur l'état du relais	Réponse avec des informations sur l'état des relais	Changer le nom de la matrice	Demande d'informations sur l'état du tableau	Réponse avec des informations sur le statut de la matrice	Définir les valeurs de PRESET X
	(1 Byte)			07 X0								
		(1Byte)	(1Byte)	(1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte) (1Byte	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)
Valeur	(N Bytes)	ROUTING d Off: 0x00 / On: 0x01	Invalid -> 0x00	LOCAL INPUT 01 d Off. 0x00 / On: 0x01 LOCAL INPUT 02 d Off: 0x00 / On: 0x01 LOCAL INPUT 02 d Off: 0x00 / On: 0x01 LOCAL INPUT 03 d Off: 0x00 / On: 0x01 LOCAL INPUT 06 d Off: 0x00 / On: 0x01 LOCAL INPUT 10 d Off: 0x00 / On: 0x01 LOCAL INPUT 10 d Off: 0x00 / On: 0x01 LOCAL INPUT 10 d Off: 0x00 / On: 0x01 LOCAL INPUT 11 d Off: 0x00 / On: 0x01 LOCAL INPUT 08 d Off: 0x00 / On: 0x01 LOCAL INPUT 11 d Off: 0x00 / On: 0x01 NETWORK INPUT 03 d Off:0x00 / On: 0x01 NETWORK INPUT 03 d Off:0x00 / On: NETWORK INPUT 03 d Off:0x00 / On: NETWO	DC-48V d Off: 0x00 / On: 0x01	RELAY d Off: 0x00 / On: 0x01	Invalid d 0x00	RELAY 02 d Off: 0x00 / On: 0x01	Invalid d 0x00	Invalid d 0x00	FIRMWARE VERSION d 0x10 - 0x99	Invalid d 0x00
		(1Byte) (1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)	(1Byte)
Chaîne	Bytes	OUTPUT CHANNEL d 0x01-0x14 INPUT CHANNEL d 0x01-0x14	OUTPUT CH d 0x01-0x14	OUTPUT CH d 0x01-0x14	INPUT CH 1-12 d 0x01-0x0C	RELAY d Relay 1: 0x01 / Relay 2:0x02 (1 Byte)	Invalid d 0x00	RELAY 01 d Off: 0x00 / On: 0x	DEVICE NAME d 16 char ASCII Code	Invalid d 0x00 (1 Byte)	DEVICE NAME d 16 char ASCII Code	PRESET NUMBER d 0x01-0x18
Commande	(2 Bytes)	60×0 00×0	0×00 0×0A	0×00 0×00	0×00 0×0F	0x00 0x10	0x00 0x11	0x00 0x11	0×00 0×12	0x00 0x13	0x00 0x13	0x00 0x14
	(2 Bytes)			Oxas oxer								
Port	(1 Byte)			LAN (TCP/IP) d 0x00 d 0x70 d 0x70								
Dispositif	(1 Byte)			Matrix ID: 100 d 0x01 Matrix ID: 100 d 0x01 Matrix ID: 200 d 0x02 Matrix ID: 2000 d Matrix ID: 2300 d Matrix ID: 2300 d								
	(2 Bytes)			90×0 00×0								
Longueur	(2 Bytes)	0x00 0x11	0x00 0x10	0×00	0x00 0x10	0x00 0x10	0x00 0x10	0x00 0x10	0x00 0x10	0x00 0x10	0x00 0x1F	0×00 0×10
	(3 Bytes)			0x01 0x20 0x03								
	٩ ۷	15	16	4	18	19	20	21	22	23	24	25



Pour la mise à jour du firmware de MPX-4088, MPX-400MIC, MPX-410ES, MPX-420V, MPX-430VS et MPX-440X

MPX-4088 et dirigez-vous à la section Software pour télécharger l'outils de mise à jour du firmware.

Connectez votre PC au même réseau que la matrice **MPX-4088**, lancez l'outils de mise à jour du firmware et suivez les indications suivantes :

- 1.- Appuyez sur le bouton SETUP et sélectionnez l'IP du dispositif à mettre à jour.
- 2.- Ensuite, appuyez sur le bouton Connect. Si la connexion s'est réalisée correctement, l'indicateur de connexion passera au vert et vous verrez tous les dipositifs connectés à la matrice.

IP Settings: IP: 192.168.200.120 Port: 5000 Connect Setup	IP Settings:           IP:         192.168.200.120         Port:         5000         Disconnect         Setup
Device Name App ID Device ID Firmware Version Status	Device Name         App ID         Device ID         Firmware Version         Status           MPX-408         06         1000         Mcu: 1.5 DSP. 1.2         True           MPX-400MIC         08         1050         Mcu: 1.6         True           MPX-400MIC         22         10F2         Mcu: 1.6         True           MPX-400MICA         08         1050         Mcu: 1.5         True           MPX-400MICA         09         1000         Mcu: 1.5         True
Current Select index: 0 Total Device: 0 Read DSP Firmware Update	Current Select index: 0 Total Device: 5 Read DSP Firmware Update

3.- Sélectionnez le dispositif que vous souhaitez mettre à jour, appuyez sur Firmware Update et ensuite sur Update Firmware pour lancer la mise à jour.

		Progress: 0
Update Firmware		Import All Presets
Update status: DSP firmware updating successfully		Import all preset type from device to computer file
Processing Information:		
Processing Information: The Device is Rebooting . Please wait 4 seconds		Progress: 0
Processing Information: The Device is Rebooting . Please wait 4 seconds The Device is Rebooting . Please wait 3 seconds	>	Progress: 0
Processing Information: The Device is Rebooting . Please wait 4 seconds The Device is Rebooting . Please wait 3 seconds The Device is Rebooting . Please wait 2 seconds	~	Progress: 0 Export All Presets
Processing Information: The Device is Rebooting . Please wait 4 seconds The Device is Rebooting . Please wait 3 seconds The Device is Rebooting . Please wait 2 seconds The Device is Rebooting . Please wait 1 seconds	~	Progress: 0 Export All Presets
Processing Information: The Device is Rebooting - Please wait 4 seconds The Device is Rebooting - Please wait 3 seconds The Device is Rebooting - Please wait 2 seconds The Device is Rebooting - Please wait 1 seconds The Device is Rebooting - Please wait 0 seconds	^	Progress: 0 Export All Presets Export all preset type
Processing Information: The Device is Rebooting . Please wait 4 seconds The Device is Rebooting . Please wait 3 seconds The Device is Rebooting . Please wait 2 seconds The Device is Rebooting . Please wait 1 seconds The Device is Rebooting . Please wait 0 seconds Begin update MCU2 now	^	Progress: 0 Export All Presets Export all preset type from computer to
Processing Information: The Device is Rebooting - Please wait 4 seconds The Device is Rebooting - Please wait 3 seconds The Device is Rebooting - Please wait 2 seconds The Device is Rebooting - Please wait 1 seconds The Device is Rebooting - Please wait 0 seconds Begin update MCU2 now begin update MCU2 firmware,wait	^	Progress: 0 Export All Presets Export all preset type from computer to device
Processing Information: The Device is Rebooting - Please wait 4 seconds The Device is Rebooting - Please wait 3 seconds The Device is Rebooting - Please wait 2 seconds The Device is Rebooting - Please wait 1 seconds The Device is Rebooting - Please wait 0 seconds Begin update MCU2 now begin update MCU2 firmware,wait begin update DSP firmware,wait	^	Progress: 0 Export All Presets Export all preset type from computer to device

4.- Attendez que la mise à jour se finalise et redémarrez l'appareil.

# FR SPÉCIFICATIONS TECHNIQUES

	MPX-4088
CARACTÉRISTIQUES	Matrice d'audio de 8 canaux analogiques d'entrée à 8 zones de sortie. 4 canaux numériques d'entrées/sorties configurables pour utiliser avec les commandes de contrôle mod. <b>MPX-400MIC</b> , <b>MPX-410ES</b> , <b>MPX-430VS</b> . Commandes de contrôle de zones optionnelles sur les modèles <b>MPX-420V</b> et <b>MPX-430VS</b> pour la sélection du programme émis dans la zone. Logiciel de contrôle pour PC. Indicateurs lumineux de mise en marche, bus, signal et défaillance. Écran LCD d'information. Microphone avec priorité et sélection de zones optionnel mod. <b>MPX-400MIC</b> . Compatible avec DANTE.
ENTREES	<ul> <li>8 lignes symètriques, euroblock 6.800 Ω, 7'74 Vrms maximum.</li> <li>2 ports RD pour mod. MPX-400MIC, MPX-410ES, MPX-420V, MPX-430VS,</li> <li>MPX-440X o MPX-460P, RJ-45</li> <li>1 port RC-Net pour l'interconnexion des matrices, RJ-45</li> <li>1 port LAN pour la connexion au réseau local, RJ-45</li> </ul>
SORTIES	<ul> <li>8 lignes équilibrées, euroblock 240 Ω 7'74 Vrms maximum</li> <li>2 ports RD Net, pour les modèles MPX-420V, MPX-430VS, MPX-410ES, MPX-400MIC ou MPX-440X, RJ-45</li> <li>1 extensión link, RC-Net, RJ-45</li> <li>Port RS-232, euroblock</li> </ul>
CONTRÔLES	Logiciel de contrôle pour PC (routage des entrées et sorties, fonctions DSP, égalisation, portes de bruit, compresseur, contrôle de gain,etc.) Protocole TCP-IP et RS-232 pour intégration avec d'autres systèmes
RÉPONSE	20-20.000 Hz ±1'5 dB
DISTORSION	Harmonica: < 0'01%
RAPPORT SIGNAL/ BRUIT	Microphone > 102 dB Lignes > 107 dB
PHANTOM	48 V en entrées 1 à 8, sélectionnable par logiciel
PRIORITÉ	Microphone avec sélecteur de zones optionnel modèle <b>MPX-400MIC</b> Entrées 1 à 8 par niveau, sélectionnable par logiciel
ALIMENTATION	100-240 V CA, 80 W
DIMENSIONS	483 x 44 x 256 mm profondeur. 1 U rack 19"
OPCIONAL	<ul> <li>MPX-400MIC : microphone avec priorité et sélection de zone</li> <li>MPX-410ES : bouton d'entrée/sortie audio</li> <li>MPX-420V : bouton de contrôle de zone</li> <li>MPX-430VS : bouton de contrôle de zone avec sortie stéréo</li> <li>MPX-440X : extension du port RD</li> <li>MPX-450D : module DANTE</li> <li>MPX-460P : unité de contrôle avec écran tactile</li> </ul>



	MDY_410ES
CARACTÉRISTIQUES	Commande d'entrée/sortie d'audio pour matrice MPX-4088.
	2 canaux d'entrée et 2 canaux de sorties.
	Convertit et transmet audio numérique au port RD.
	Indicateurs lumineux de présence de signal et de saturation pour les entrées et les sorties.
ENTRÉES	1 micro symètrique, XLR 5.100 $\Omega$ , attribuable aux canaux 10 ou 12. 1 ligne RCA stéréo, 5.100 $\Omega$ , 7'74 V, attribuables aux canaux 9/10 ou 11/12 1 port RD Net pour la connexion à la matrice <b>MPX-4088</b> , RJ-45
SORTIES	2 lignes symètriques, euroblock 240 $\Omega$ , 7'74 V, attribuables aux canaux numériques 9/10 ou 11/12
CONTRÔLES	Contrôle du volume du microphone Alimentation phantom sélectionnable.
CONNEXION	Câble, RJ-45, Cat 5e
PHANTOM	48 V
ALIMENTATION	24 V DC, 100 mA, par port RD
DIMENSIONS	147 x 86 x 47 mm profondeur
ACCESSOIRES	Boîtier de superficie

**MPX-420V CARACTÉRISTIQUES** Commande à distance du contrôle du volume et attribution de zones pour la matrice d'audio mod. MPX-4088. Connexion à la matrice par moyen du câble RJ-45, Cat 5e et extension link pour la connexion en plus de MPX-420V en série. Écran LCD avec l'information de niveau du volume pour la sortie sélectionnée. **ENTRÉES** 1 port RD pour connexion à la matrice MPX-4088, RJ-45 1 extensão link, RJ-45 SORTIES **CONTRÔLES** Contrôle du volume et attribution des zone CONNEXION Câble RJ-45, Cat 5e ALIMENTATION 24 V DC, 100 mA, port RD DIMENSIONS 147 x 86 x 47 mm profondeur **ACCÉSSOIRES** Boîtier de superficie

FR

	MPX-430VS
CARACTÉRISTIQUES	Commande à distance du contrôle du volume avec deux sorties d'audio symètriques et attribution de zones pour la matrice d'audio modèle <b>MPX-4088</b> . Connexion à la matrice par câble RJ-45, catégorie 5e. Écran LCD avec information du niveau de volume pour la sortie sélectionnée.
ENTRÉES	1 port RD pour la connexion à la matrice <b>MPX-4088</b> , RJ-45
SORTIES	2 lignes symètriques, euroblock, 240 $\Omega$ , 7'74 V, attribuables aux canaux numériques 9/10 ou 11/12.
CONTRÔLES	Contrôle du volume et attribution des zones
CONNEXION	Câble RJ-45, catégorie 5e
ALIMENTATION	24 V DC, 100 mA, port RD
DIMENSIONS	147 x 86 x 47 mm profondeur
ACCÉSSOIRES	Boîtier de superficie

	MPX-460P
CARACTÉRISTIQUES	Commande à distance de contrôle de volume, répartition des zones et scènes avec écran tactile pour matrice d'audio mod. <b>MPX-4088</b> . Connexion à la matrice par câble RJ-45, Cat 5e et extension link pour connexion jusqu'à 8 <b>MPX-460P</b> en série. Écran tactile LCD capacitive.
ENTRÉES	1 port RD pour connexion à la matrice MPX-4088, RJ-45
SORTIES	1 extension link, RJ-45
CONTRÔLES	Contrôle de volume, répartition des zones et scènes
ALIMENTATION	<ul> <li>24 V CC, 100 mA, par port RD avec connexion directe depuis la matrice.</li> <li>24 V CC, 300 mA, Euroblock, pour alimentation locale lorsque plus d'un</li> <li>MPX-460P se connecte en serie</li> </ul>
DIMENSIONS	150 x 115 x 25 mm profondeur
ACCÉSSOIRES	Boîtier de superficie

	MPX-440X
CARACTÉRISTIQUES	Prolongation de 4 ports RD pour la matrice d'audio modèle <b>MPX-4088</b> . Connexions par le câble RJ-45, Cat 5e. Indicateurs lumineux de mise en marche et de connexion pour chaque port.
ENTRÉES	1 port RD pour connexion à matrice MPX-4088, RJ-45
SORTIES	1 port d'audio RD pour la connexion du modèle <b>MPX-400MIC</b> , <b>MPX-410ES</b> ou <b>MPX-430VS</b> , RJ-45 3 ports de contrôle RD pour connexion du modèle <b>MPX-420V</b> ou <b>MPX-460P</b> , RJ-45
CONNEXION	Câble RJ-45, Cat 5e.
ALIMENTATION	24 V DC, 1 A, euroblock
DIMENSIONS	196 x 44 x 135 mm profondeur

FR